

FIREBRICK INSTALLATION

The package contains 20 full-size firebricks. With the woodstove in the upright position, install firebricks as follows:

1. Place 4 full-size firebricks against the rear wall.
2. Next install 2 rows of 3 firebricks on the bottom of the unit. Place them to the rear of the firebox.
3. Then, to install each side brick, insert the brick under the retaining flange near the front of the baffle air box on each side of the firebox and then slide the brick to the back of the unit. (NOTE: The retaining flange can be bent outwards slightly if needed to make room for the bricks using a set of vise-grips or pliers.
4. Finally install the last 4 firebricks by inserting the side brick under the retaining flange and then the bottom brick under the side brick and lay it down.

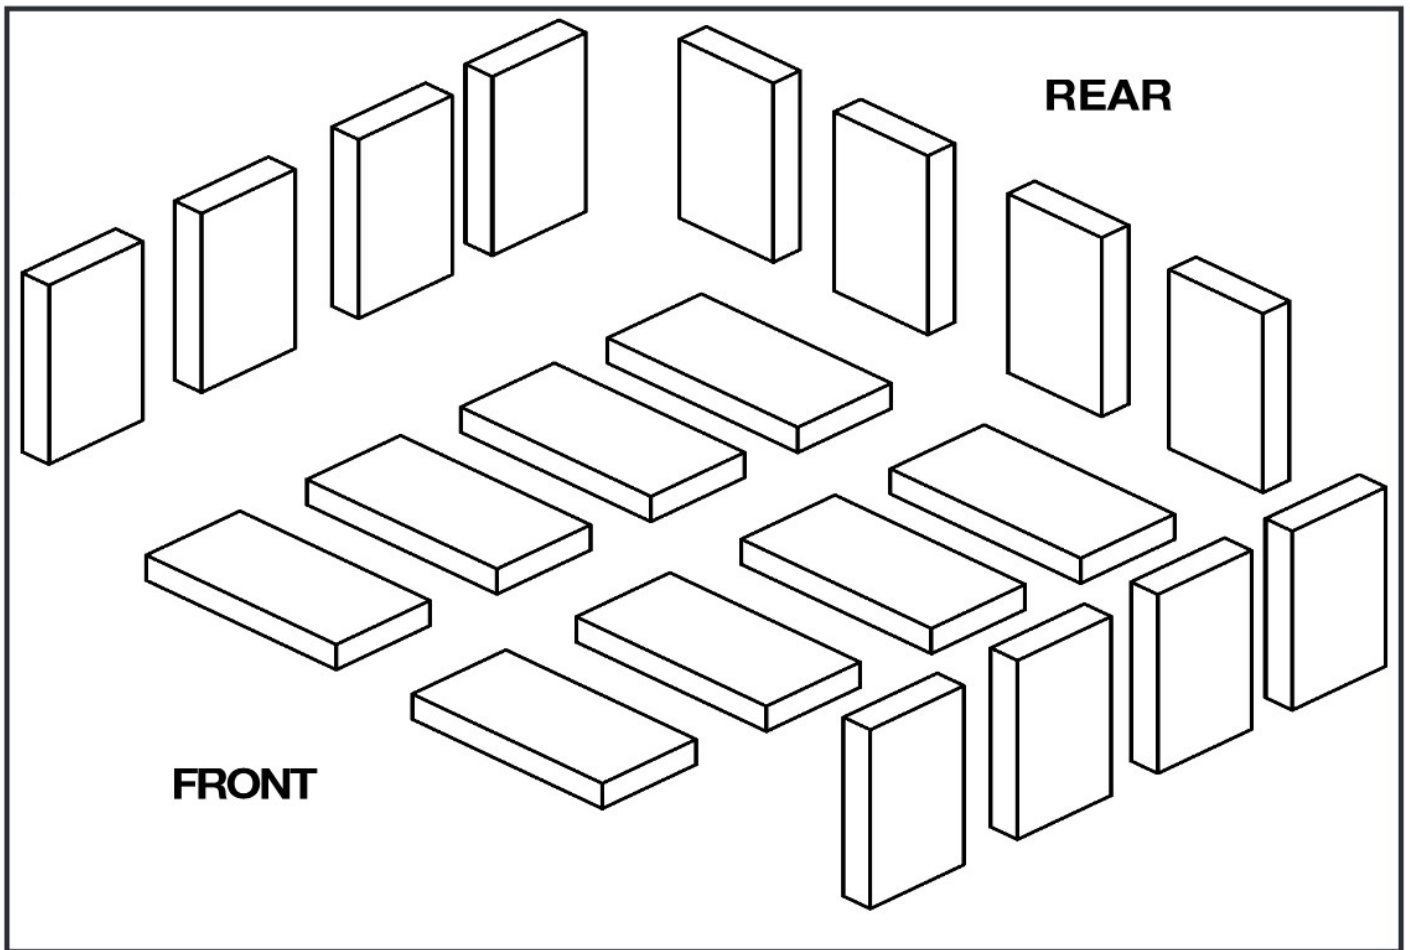


Figure 12: TN20 Firebricks.